

MCI-01 Operating Instructions

Stopping Compressor

Press red button on RHS.

Unit may not stop immediately if on load (making air pressure).

LED flashing quickly : Unit is about to stop.

LED flashing slowly : Unit de-pressurizing after being stopped.

LED on : unit is stopped

Starting Compressor

Press green button on LHS.

Unit will not start if stop button has been pressed in the preceding

1 ½ minutes. LED flashing quickly : as above (will start after 1 ½ mins).

LED flashing slowly : Unit is off-load.

LED on : Unit is making pressure.

Emergency Stop

Press large red button below panel.

LEDs will be flashing and StP displayed.

To reset, twist button ¼ turn clockwise and release, then press green R reset button.

Temperature Reading

The unit will normally display the oil temp but if not press blue button on top LHS. LED will flash slowly if unit is nearing over-temperature setting.

LED flashes quickly the units oil temperature is too high and it has stopped.

Hour Reading

Press the top RHS button, for 4050 hours run, unit will display- RUn, 405, 050, and then repeat for approximately 10 seconds and return to Temperature.

LED Flashing : unit requires a service.

Reset Unit

Press yellow reset button, display and any flashing LEDs will return to normal. Unit will be able to be started etc.

Alarm

LED flashing quickly : Fault has occurred, shown on display.

LED flashing slowly : Service is due, shown on display.

Display

FLt: Minor service due now, unit will continue to run.

StP: Emergency stop activated

OLd : Thermal overload has tripped, unit has stopped.

ERR: General fault error, unit has stopped.